


cron

## 26. Mounting Brackets

Written By: Paul Cronje




## Step 1 — Tools Required

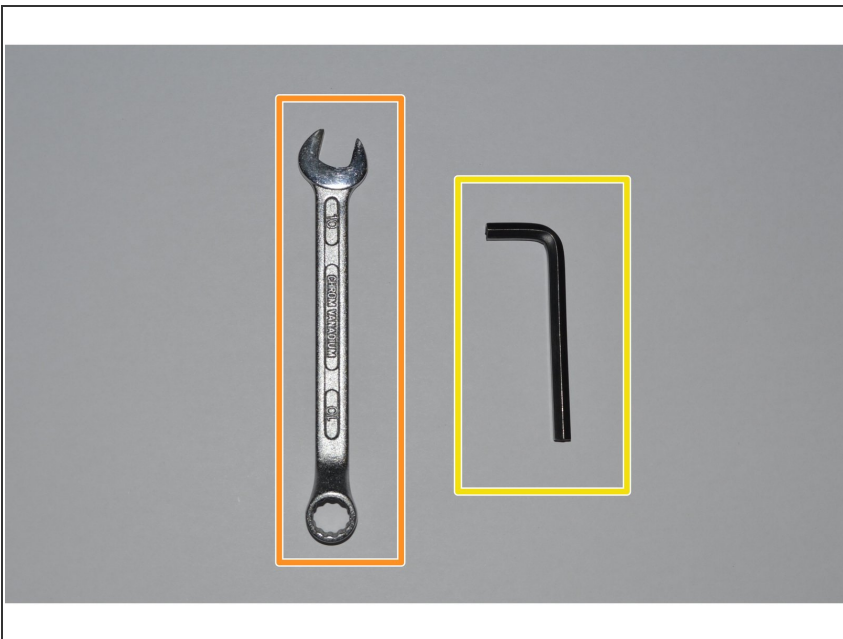

- No.10 Spanner
- 5mm Allen Key

## Step 2 — Mount Bracket

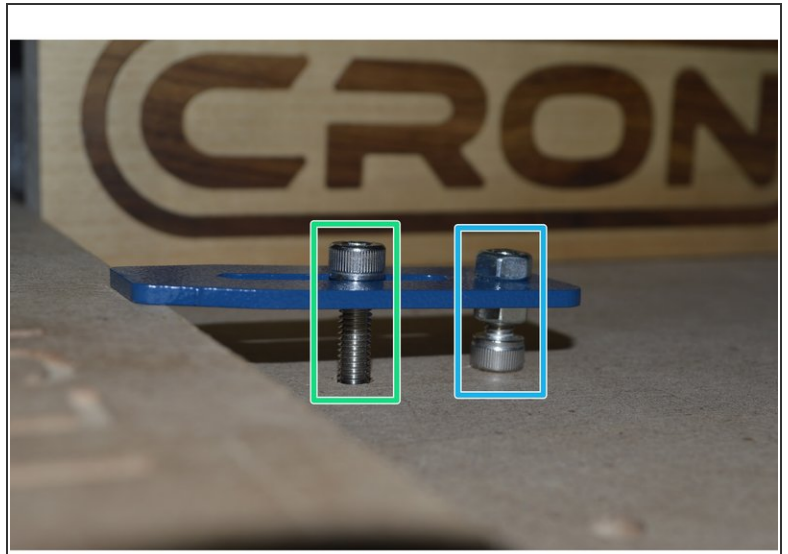

- Insert M6x16 Cap Screw (**use adjustable slot on bracket**)
- Insert M6x30 Cap Screw (**use adjustable slot on bracket**)
- Insert M6x16 Cap Screw (inserted upside down for support) with M6 standard nuts(2pcs) placed both sides of bracket (**use fixed slot on bracket**)
- **Note:** M6x16 Cap Screw used for lower elevated objects and M6x30 Cap Screws for higher elevated objects with support!

## Step 3 — Mounting thin plate



- Insert wisdom here.

## Step 4 — Mounting thick plate



- Insert wisdom here.