



cron

08. Laser start-up

Written By: Paul Cronje

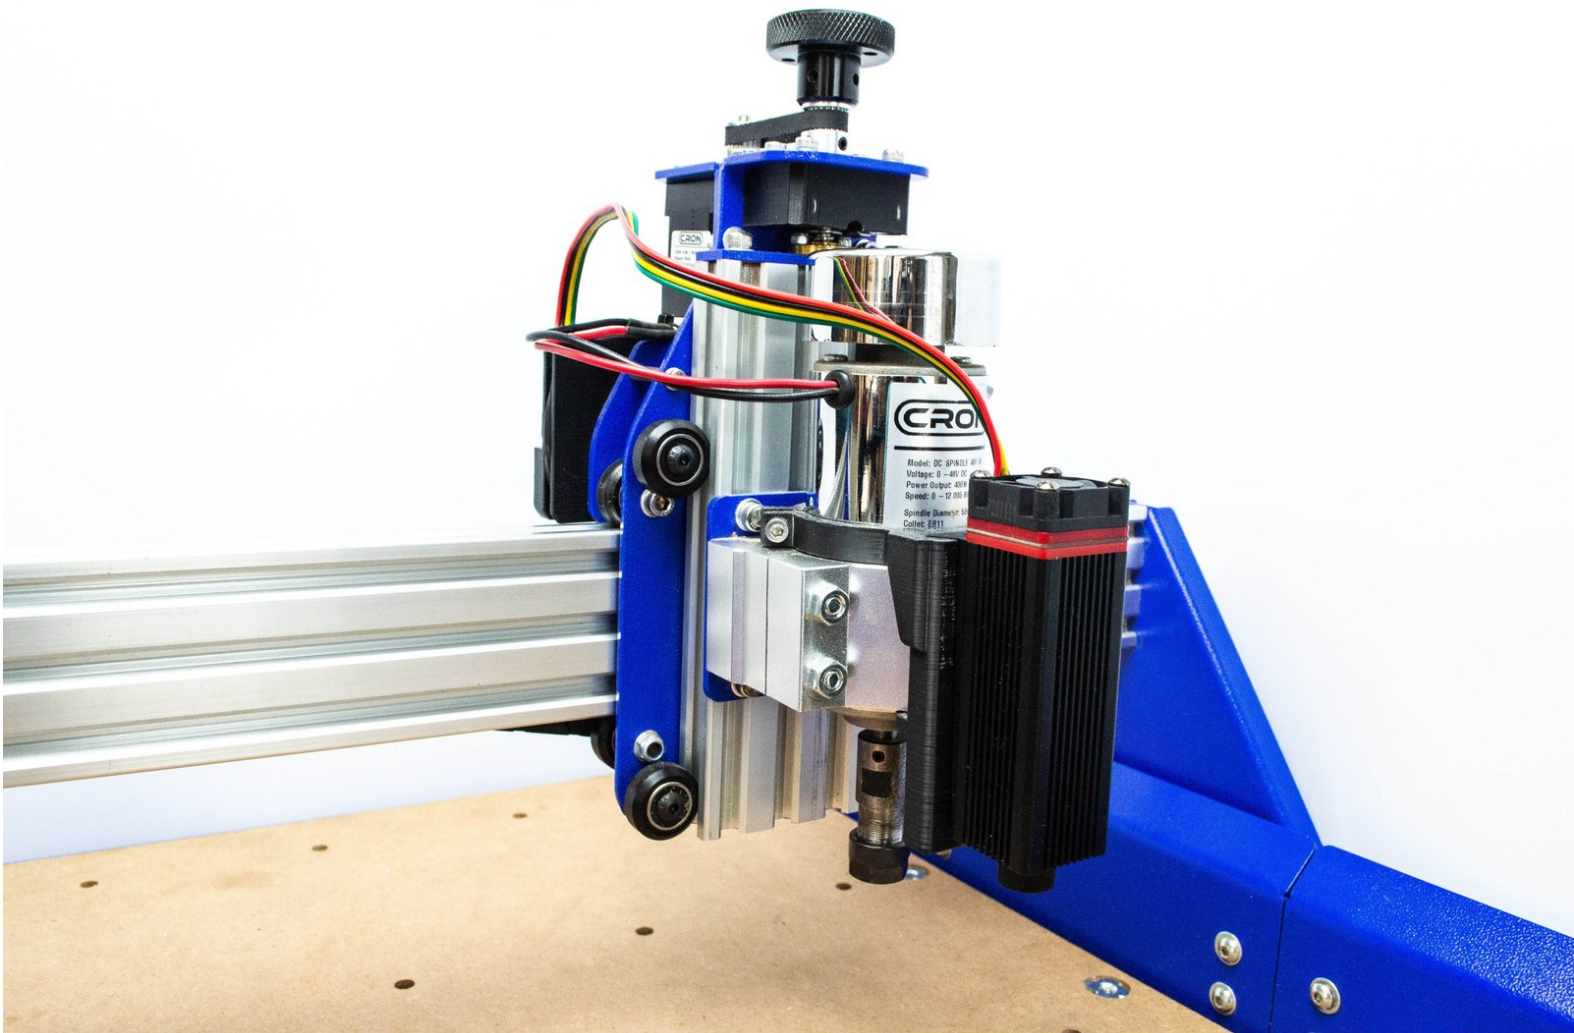

Step 1 — Laser Start-up

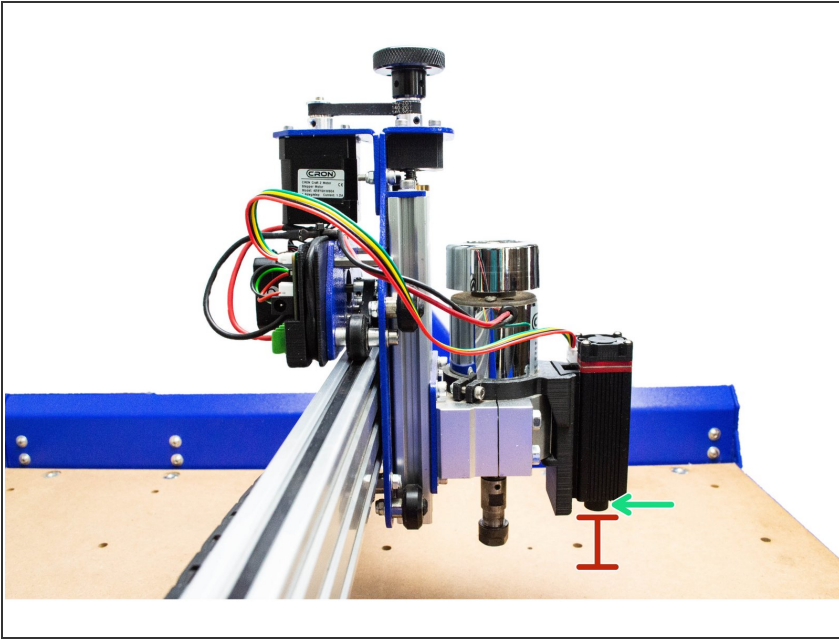

- At this point you need to consult the user manual included in your laser upgrade kit to install the software and connect to the laser
- When setting the focus of the laser, the distance between the laser lense and workpiece should be 40mm.
- The focus of the laser is set by turning the the black lense holder at the bottom of the laser